



## **RECOMMENDED SPARE PARTS: 516 VEP/VEM VALVES**

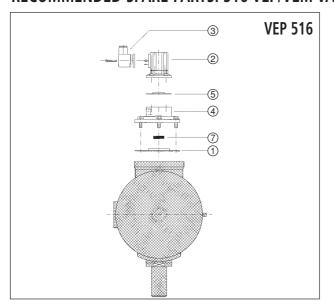

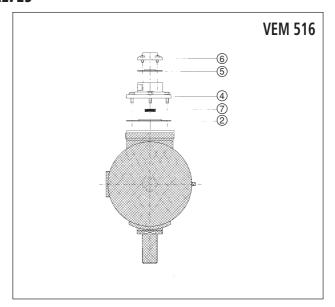

Note: for maintenance purpose only the spare parts listed below. Do not dismantle the body of the valve and the blow tube, which must be considered as an integral part of the tank.

		VEP 516	VEM 516
1	Main diaphragm	DB116	DB116
2	Pilot group	PDM06/*	-
3	Connector	PLG9	-
4	Top cover	M310100	M310100
5	First stage diaphragm	DB16	DB16
6	Small cover	-	M310082
7	Spring	M470568	M470568

<sup>\*:</sup> Specify voltage/frequence.